


038
037
036
035
034
033
032
031
030
029
028
027
026
025
024
023
022
021
020
019
018
017
016
015
014
013
012
011
010
09
08
07
06
05
04
03
02
01
00

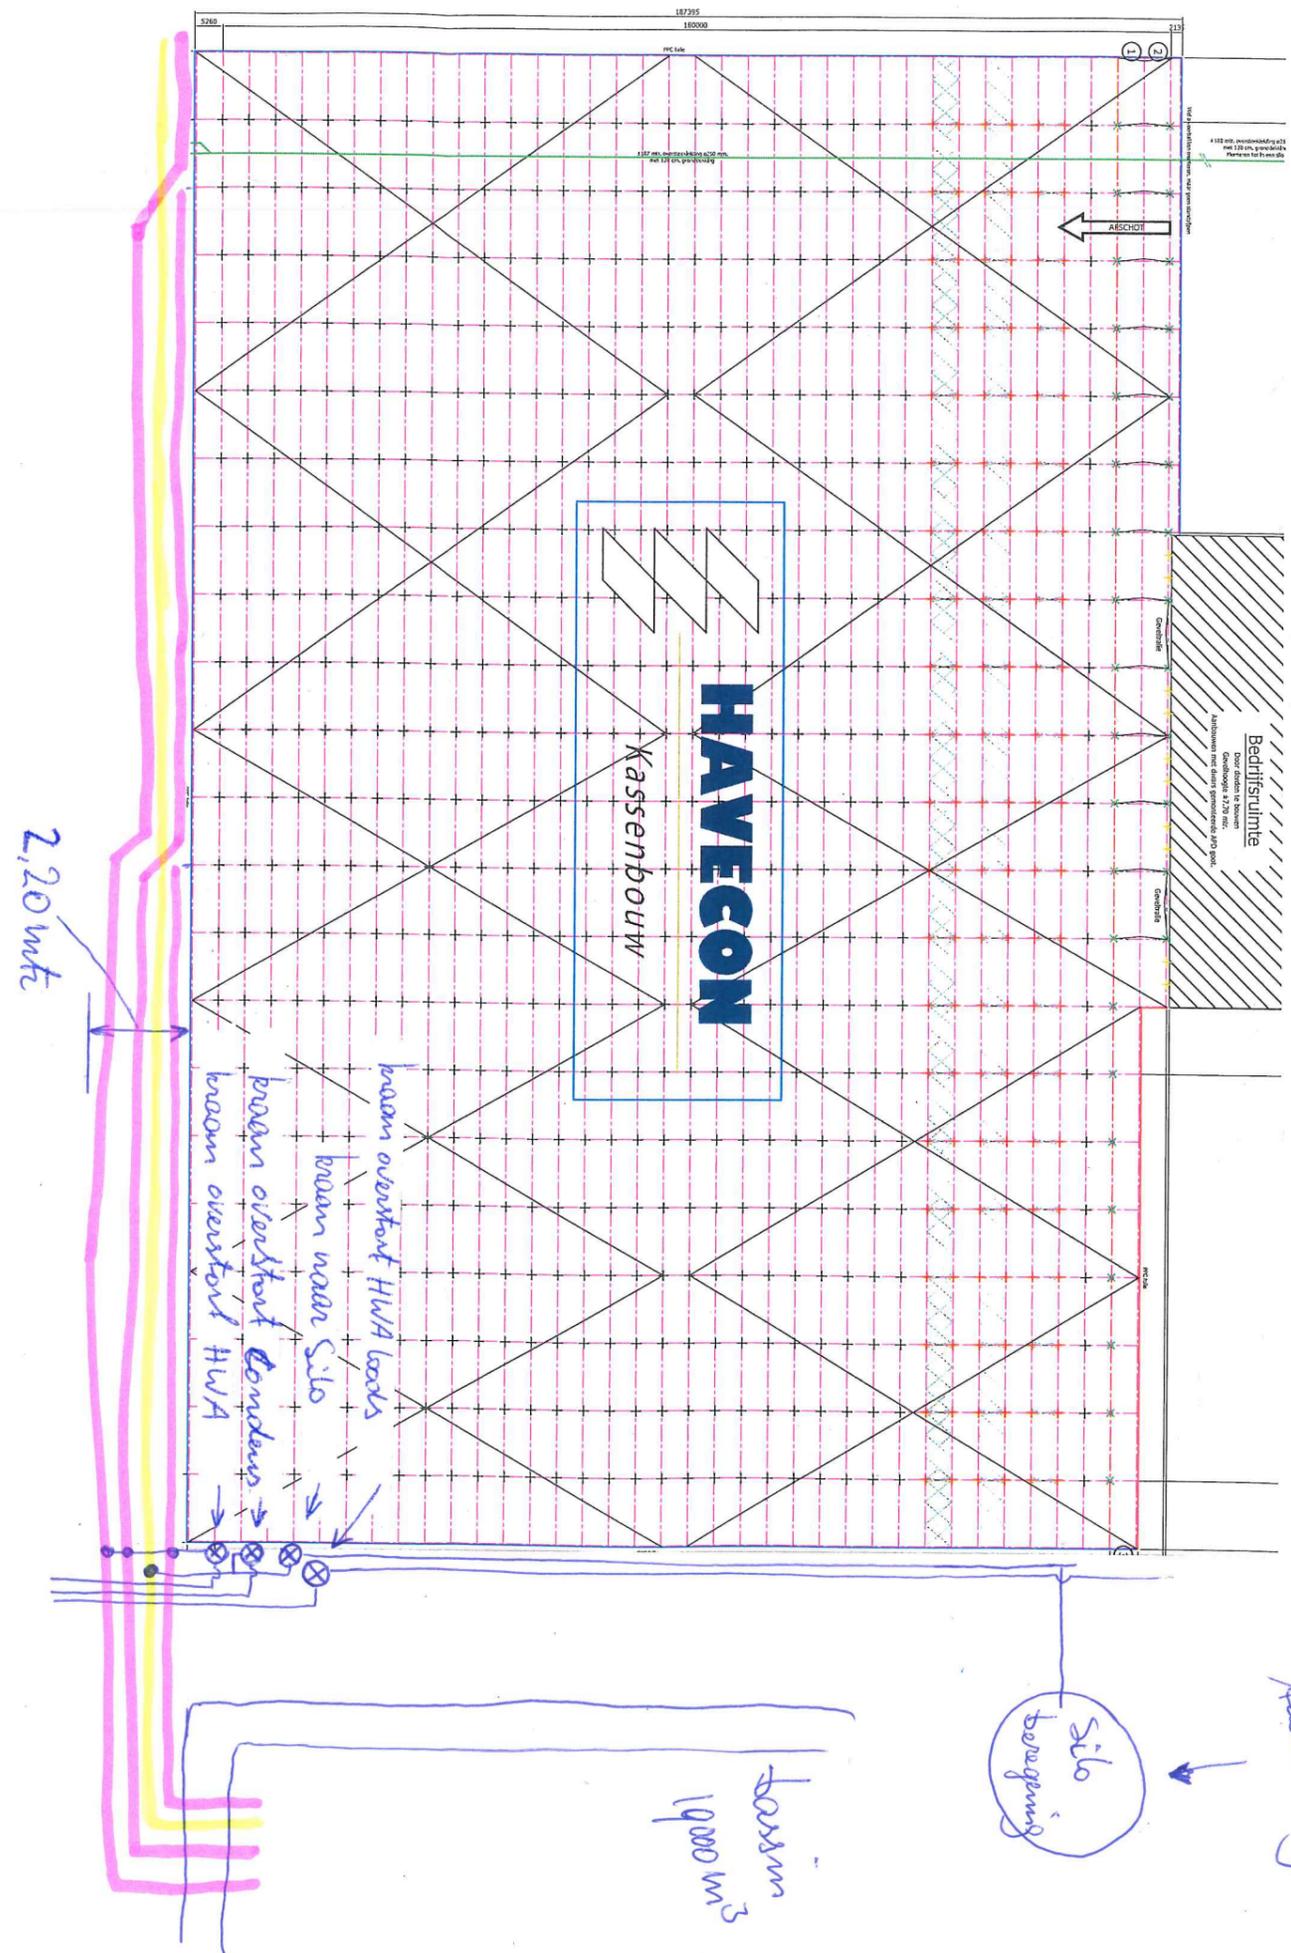

 = condens leiding
 = HVA leiding